



Well Tempered Lab

INSTRUCTION MANUAL

DPS

Description

The Well Tempered Lab DPS power supply is a dedicated power supply that is compatible with all Well Tempered Lab turntables. The Well Tempered Lab DPS also provides two additional 12v outlets of alternative polarity for ancillary 12v equipment such as phono-stages.

Main connection

Provided via a standard IEC socket and cable. Please ensure connection to the mains is via a plug compliant with regulations in the country of operation. If in doubt, please contact your dealer or Well Tempered Lab distributor.

Voltage selection

Provided via a selector switch on the rear panel. Please make certain correct voltage for the country of operation is selected before plugging into the A/C volt outlet. Well Tempered Lab are not responsible for incorrect voltage selection.

12v Polarity outlet

Please choose the correct polarity for the ancillary 12v product you intend to use with the Well Tempered Lab DPS. Again, Well Tempered Lab bear no responsibility for incorrect 12v voltage selection. If in doubt, please consult your dealer or Well Tempered Lab distributor.

IMPORTANT SAFETY INSTRUCTIONS

Read Instructions

All the safety and operating instructions should be read before using this product.

Retain Instructions

The safety and operating instructions should be retained for future reference.

Heed warnings

All warnings on the product and in the operating instructions should be adhered to.

Follow instructions

All operating and use instructions should be followed.

Cleaning

Unplug the product from the wall outlet before cleaning. Do not use liquid or aerosol cleaners. Use a damp cloth for cleaning.

Power sources

IEC socket on rear of unit. It is imperative that the selection of mains plugs and cables are compliant with the regulations in the country of operation.

Servicing

Refer all servicing to qualified service personnel.

Warranty

Well Tempered Lab manufactures its products to very high standards and we are confident our products will perform well. Accordingly, we warrant the Well Tempered Lab DPS against manufacturing defects in material and workmanship to the original owner for a period of one year from the original date of purchase.


This warranty does not extend to damage caused by improper use/installation, faulty ancillary equipment, modifications, unauthorised repair, shipping damage or loss, abuse, accidents, use on improper voltage/current, lightning or other acts of God, normal wear and tear, commercial use, or purchases from unauthorised dealers. Proof of purchase as evidence the unit was purchased from an authorised dealer within the warranty period may be required for warranty service.

Do not return the product without first contacting your dealer or Well Tempered Lab. This warranty is non-transferable.

Rear Panel

Warning

Ensure correct voltage is selected for your location

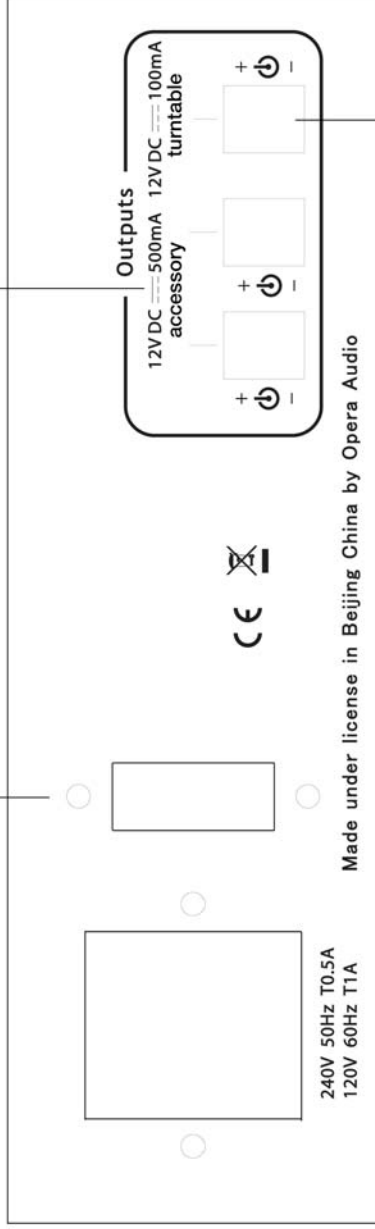

Accessory 12V outputs
Ensure correct polarity
for selected device

Outputs

12V DC --- 500mA
accessory

12V DC --- 100mA
turntable



240V 50Hz T0.5A
120V 60Hz T1A

Made under license in Beijing China by Opera Audio

Power supply for
Well Tempered
Turntables Only

Note: Early model Dynavector P75 Phono Stage were powered by 12V positive earth. They are not compatible with this model DPS. Consult your dealer for correct connection.