



Well Tempered Lab

INSTRUCTION MANUAL

DPS

## **Description**

The Well Tempered Lab DPS power supply is a dedicated power supply that is compatible with all Well Tempered Lab turntables. The Well Tempered Lab DPS also provides two additional 12v outlets of alternative polarity for ancillary 12v equipment such as phono-stages.

## **Mains Connection**

Provided via a standard IEC socket and cable. Please ensure connection to the mains is via a plug compliant with regulations in the country of operation. If in doubt, please contact your dealer or Well Tempered Lab distributor.

## **Voltage Selection**

Provided via a selector switch on the rear panel. Please make certain correct voltage for the country of operation is selected before plugging into the A/C volt outlet. Well Tempered Lab are not responsible for incorrect voltage selection.

## **12V Polarity Outlet**

Please choose the correct polarity for the ancillary 12v product you intend to use with the Well Tempered Lab DPS. Again, Well Tempered Lab bear no responsibility for incorrect 12V voltage selection. If in doubt, please consult your dealer or Well Tempered Lab distributor.

## **IMPORTANT SAFETY INSTRUCTIONS**

### **Read Instructions**

All the safety and operating instructions should be read before using this product.

### **Retain Instructions**

The safety and operating instructions should be retained for future reference.

### **Heed Warnings**

All warnings on the product and in the operating instructions should be adhered to.

### **Follow Instructions**

All operating and use instructions should be followed.

## Cleaning

Unplug the product from the wall outlet before cleaning. Do not use liquid or aerosol cleaners. Use only a damp cloth for cleaning.

## Power Sources

IEC socket on rear of unit. It is imperative that the selection of mains plugs and cables are compliant with the regulations in the country of operation.

## Warranty & Service

Valid on completion of warranty card and confirmed date of purchase. Details can be registered at [www.welltemperedlab.net/welltemperedlab/contact/](http://www.welltemperedlab.net/welltemperedlab/contact/) or mailed to: Well Tempered Lab, P.O. Box 2650, Christchurch, New Zealand.

This Well Tempered Lab product is warranted against defects in material and workmanship for one year from date of purchase.

This warranty does not cover normal wear and tear and is void if the Well Tempered product has been subject to mis-use, accident or negligence or if it has been tampered with or modified in anyway. Spillage of any fluids supplied by the Well Tempered Lab is not covered within the scope of this warranty.

Warranty is restricted to the territory in which the product was purchased. Our distributors and dealers are under contractual obligation to service under warranty products only sold through them. They are entitled to make a non refundable charge for service to products purchased outside the territory if required.

## Claims Under This Warranty

The product should be returned to the dealer or†nearest Well Tempered distributor, complete with warranty card and confirmed date of purchase.

## The European Waste Electrical and Electronic Directive

This product can be recycled. Products bearing this symbol must NOT be thrown away with normal household waste. At the end of the product's life, take it to a collection point designated for recycling of electrical and electronic devices. Find out more about return and collection points through your local authority.


The European Waste Electrical and Electronic (WEEE) Directive was implemented to dramatically reduce the amount of waste going to landfills, there by reducing the environmental impact on the planet and on human health. Please act responsibly by recycling used products. If this product is still useable, consider giving it away or selling it.



## Rear Panel

**Warning**  
Ensure correct voltage is selected for your country

**Accessory 12V outputs**  
Ensure correct polarity for selected device

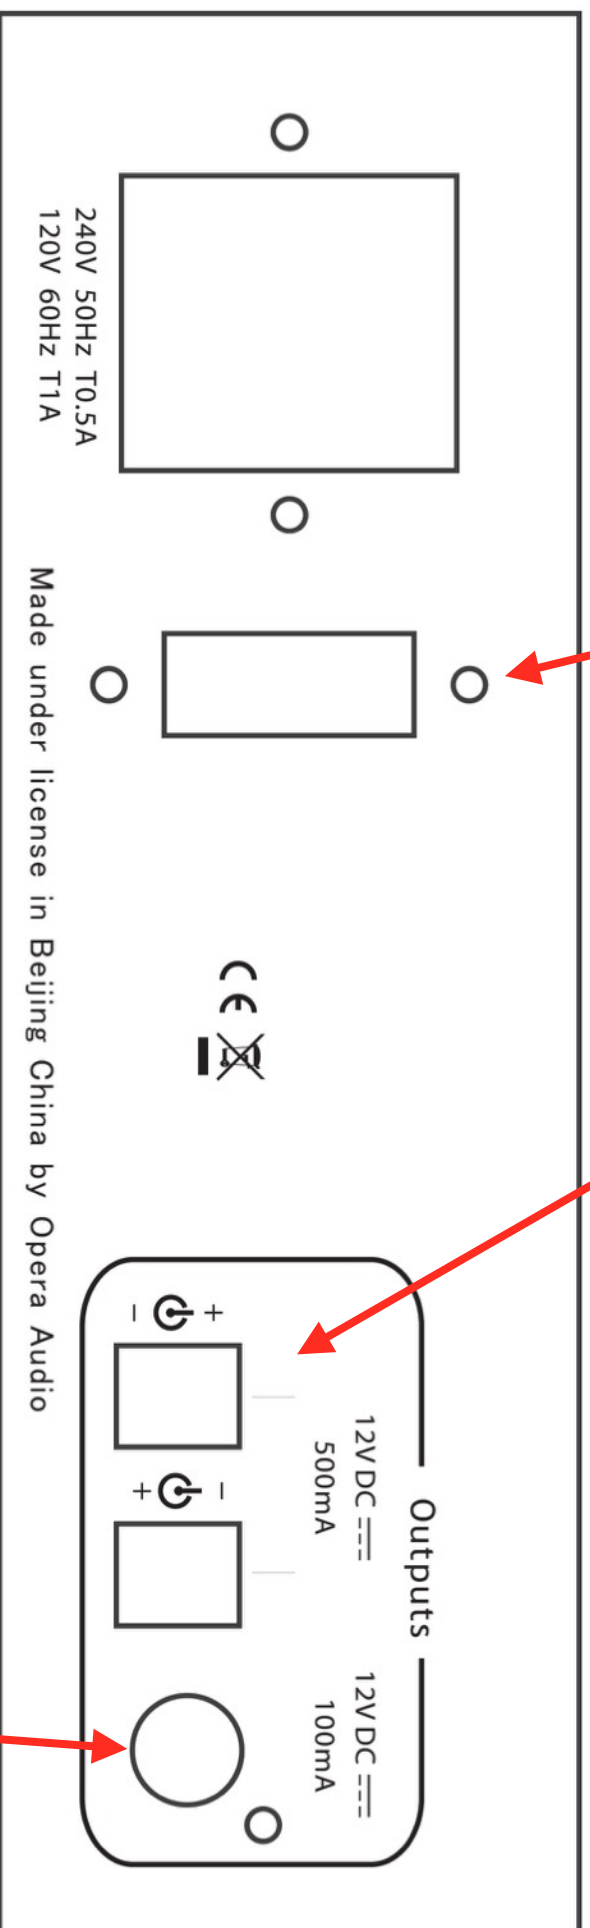

**Note:** Early model Dynavector P75 Phono Stage were supplied with 12V positive earth. They are not compatible with this model DPS. Please consult your dealer for correct connection.

**Power Supply**  
For Well Tempered Lab  
Turntables Only

## Specifications

- Mains Connection  
120V, 60Hz/240V, 50Hz AC IEC
- Outputs  
2x 12V DC 500 mA, 1x 12V DC 100 mA
- Dimensions (H x W x D)  
182 x 113 x 55 mm, 125 x 245 x 195 mm (Shipping)
- Weight  
2 kg, 2.2 kg (Shipping)



Well Tempered Lab

### Registration Card

Name

Address

City

State

Country

Phone

Model

Dealer

Post Code (Zip)

Email

Serial No.

Date of Purchase